


SLIP BASE SOCKET OVER END OF WIRES


STRIP WIRES APPROX. 5/8" FROM ENDS — TWIST ENDS TOGETHER

APPLY SEALER TO OUTSIDE OF SEALING PLUG — FILL CAVITY WITH SEALER



PUT CRIMP SLEEVE OVER WIRE ENDS — CRIMP SLEEVE AND CUT OFF EXCESS WIRE

PULL BASE SOCKET OVER WIRE END AS FAR AS POSSIBLE

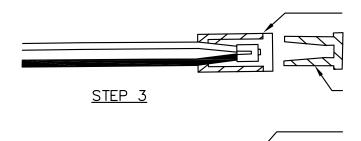

STEP 4

PUSH SEALING PLUG INTO BASE SOCKET

PUSH WIRES TO END OF BASE SOCKET TO ASSURE COMPLETE SEAKING OF CONNECTION

DRI-SPLICE TYPE WIRE CONNECTOR

NOTE:

1. FOR WIRE SIZES NO. 14, 12 AND 10, ALL CONNECTIONS IN VALVE BOXES ONLY.

2610 City of Scottsdale Standard Details

TYPICAL WIRE CONNECTION

2610